






# EXCEPTIONAL<sup>®</sup> Metals

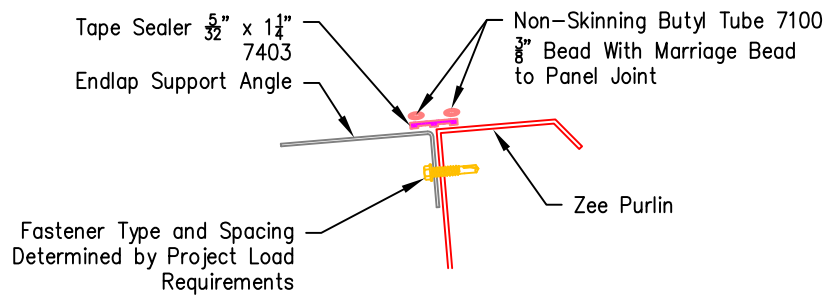

Step 1

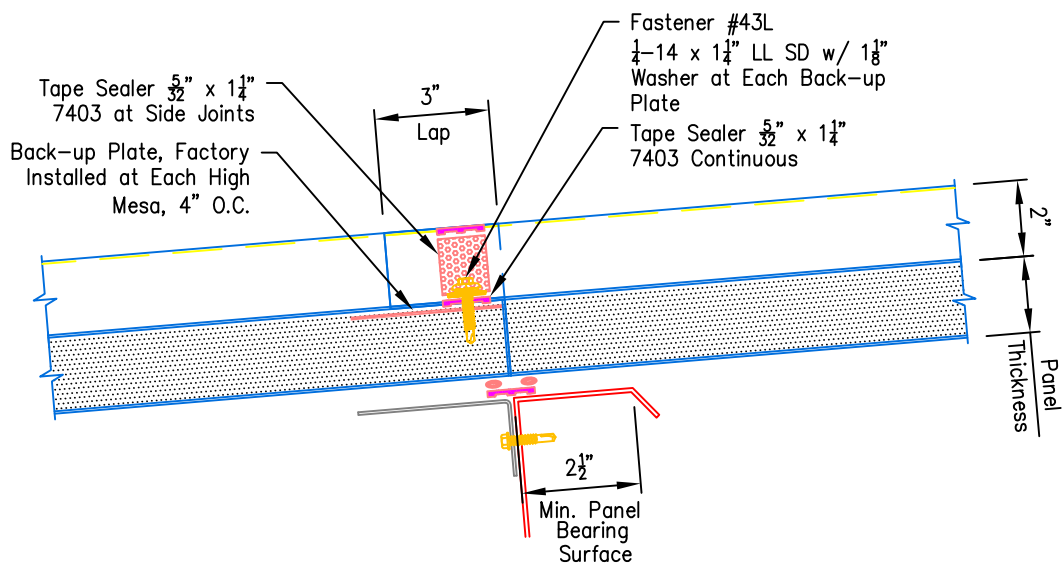

Step 2

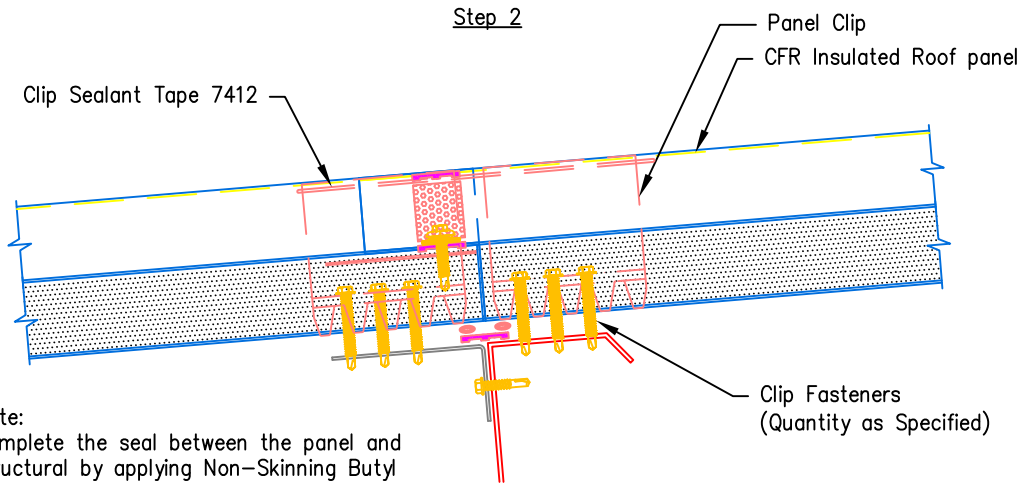

Note:  
Complete the seal between the panel and structural by applying Non-Skinning Butyl Tube 7100 from the panel groove to the sealant on the purlin or endlap support angle.

Step 3

REVISED:	07/23/2018	INSULATED ROOF PANELS
AUTHOR	BVANOCHT	EM CFR INSULATED ROOF PANEL
SCALE:	NONE	ENDLAP