




1-800-248-0280
 831 Morley Drive
 Saginaw, MI 48601


DETAIL E3510

Do not use this detail for fully adhered applications unless the membrane is back sealed using caulk or strip mastic.

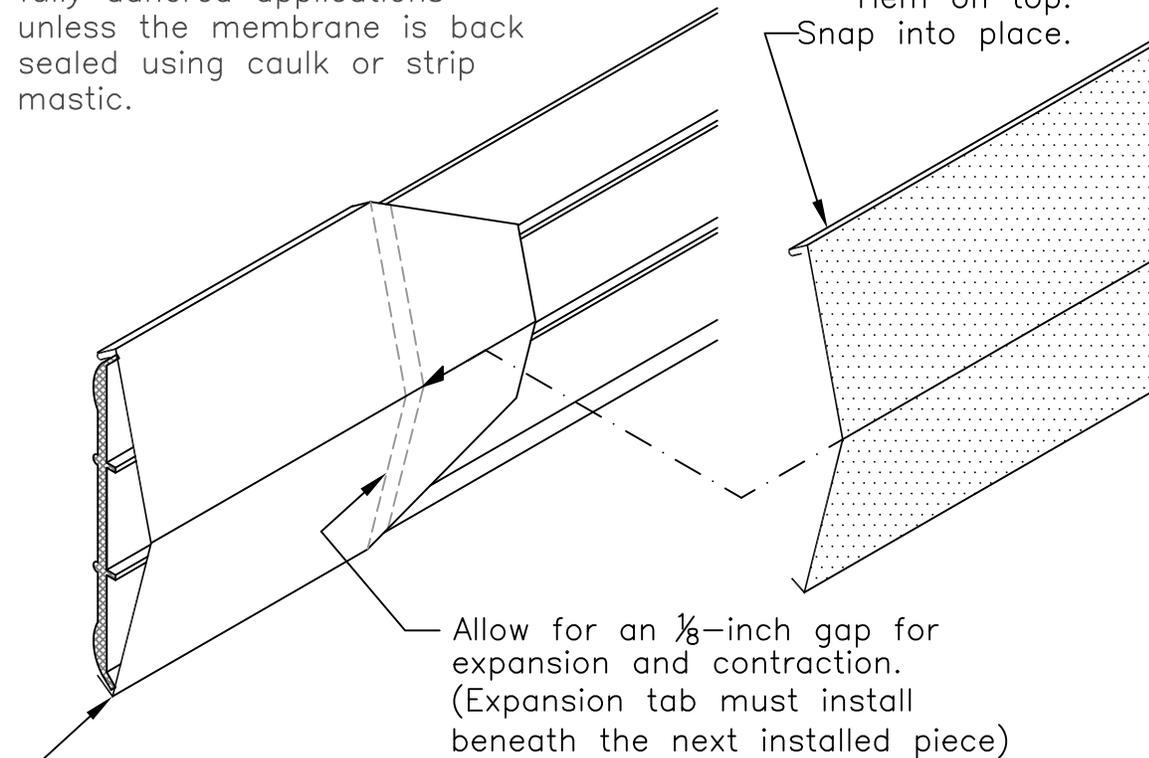

Hook on bottom and pivot up into place—snap hem on top.

Note:
 Joints on the fascia bar must be offset by a minimum of 12-inches from the joints in the fascia cover.

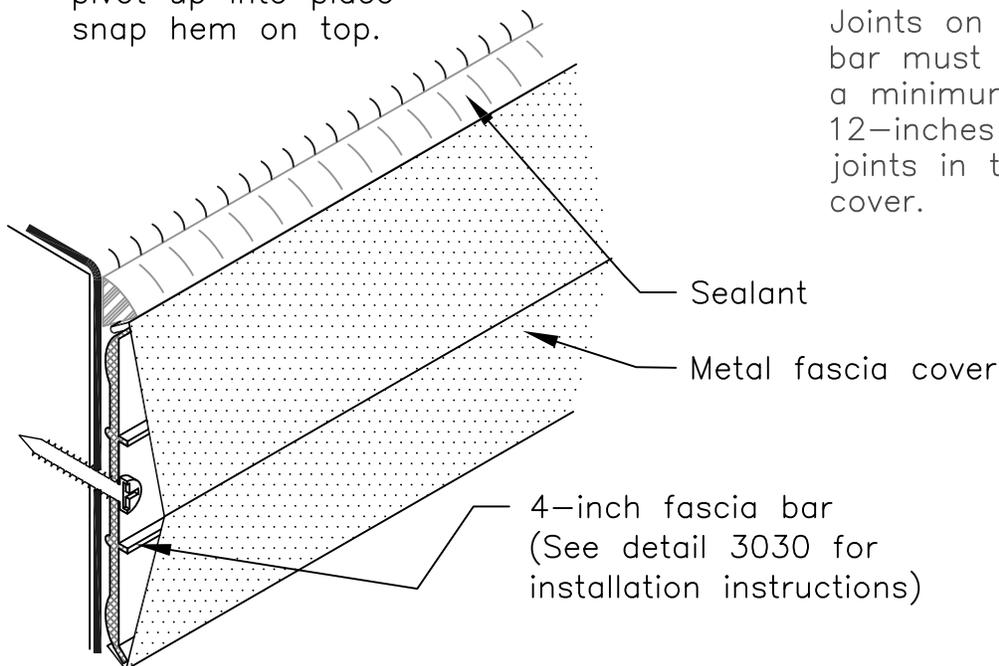

DATE: JANUARY 2013

METAL EDGE DETAIL

DRAWN BY: ENG. DEPT.

4-INCH METAL FASCIA SYSTEM

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF