




1-800-248-0280
831 Morley Drive
Saginaw, MI 48601

DETAIL E3120

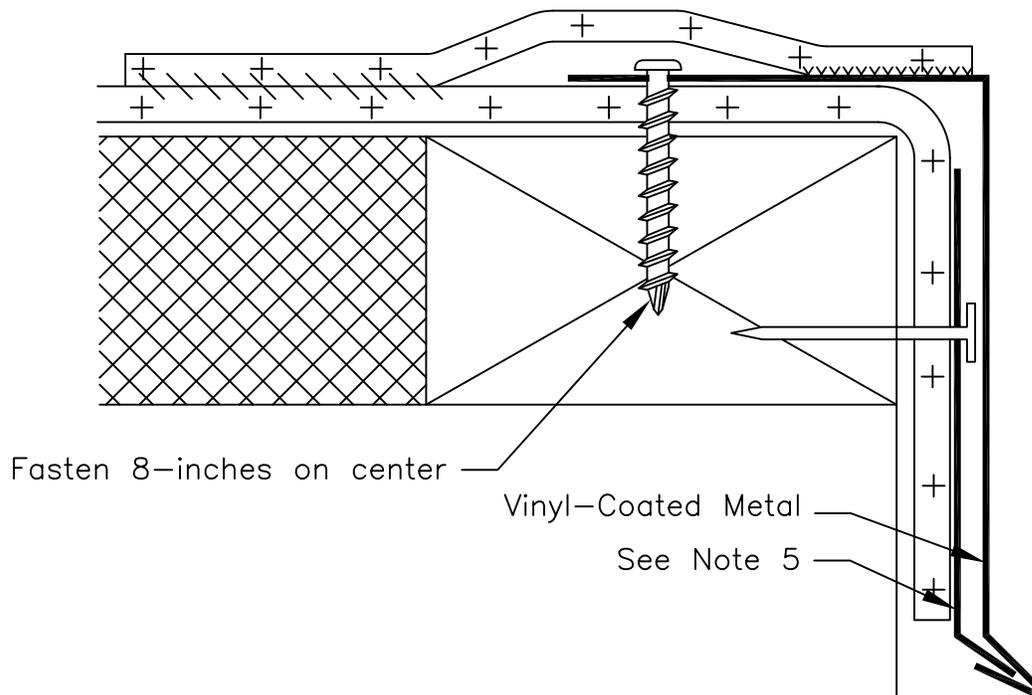

Note 1: Do not use this detail for fully adhered applications unless the membrane is back sealed using caulk or strip mastic.

Note 2: An overlap of 1 ½-inches will be required between sections of Vinyl-Coated Metal. A bead of caulk is required in each overlap.

Note 3: A wood nailer is required if 1-inch of insulation or greater is used. Top of wood nailer to be flush with top of insulation. Fasteners used to attach wood nailers shall be spaced no greater than 18-inches on center.

Note 4: Drip Edge must be fastened 6 to 8-inches on center.

Note 5: A cleat must be installed on all Drip Edge with a face of 4-inches or greater. Cleat must be fastened 6-inches on center.

DATE: JANUARY 2013

EDGE DETAIL

DRAWN BY: ENG. DEPT.

VINYL-COATED METAL DRIP EDGE

SCALE: NONE

NEW CONSTRUCTION OR RE-ROOF