




1-800-248-0280
831 Morley Drive
Saginaw, MI 48601

DETAIL E4047

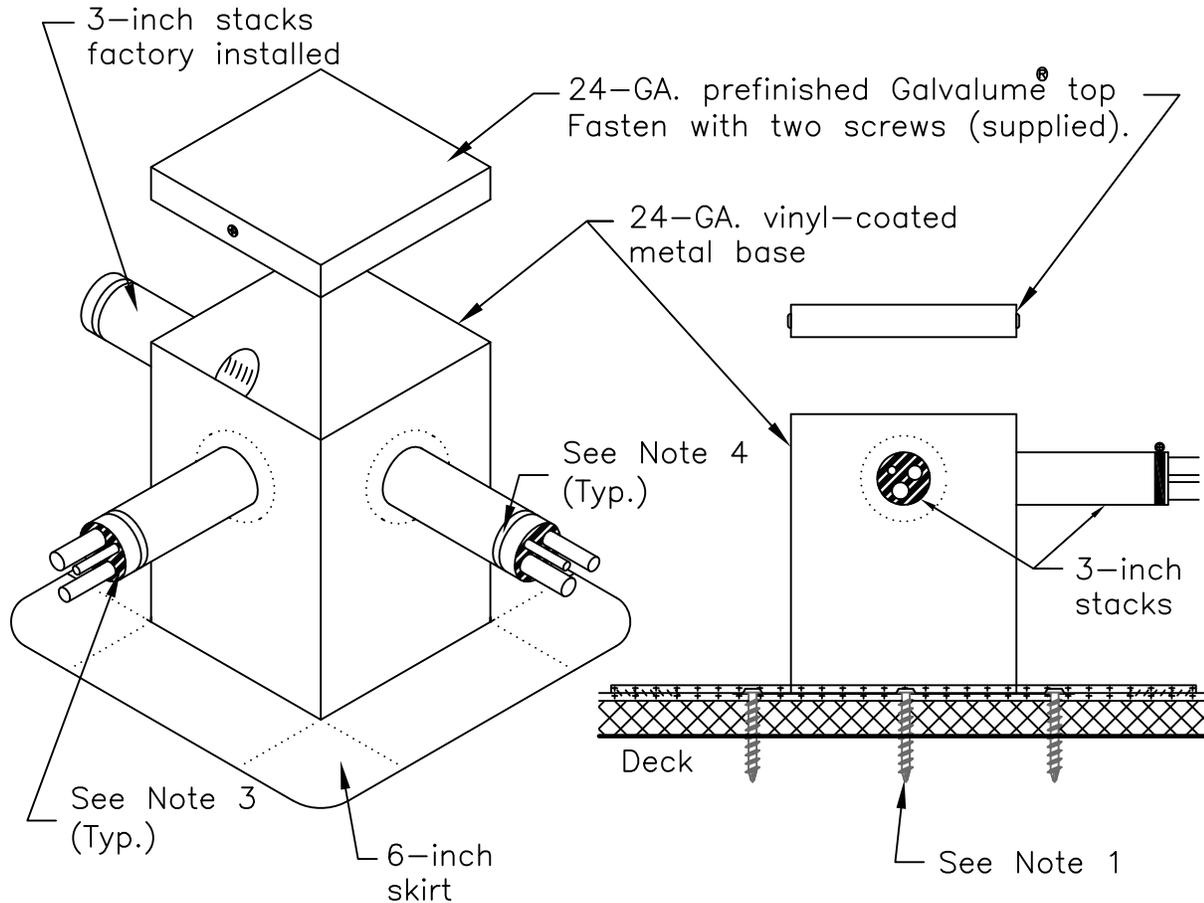

- Note 1: Attach ATR Hub with approved fasteners, minimum one per side, or 18-inches on center through the bottom flange.
- Note 2: Weld the 6-inch skirt to the deck sheet membrane.
- Note 3: Use approved sealant at entry points to ensure a watertight seal.
- Note 4: Use stainless steel bands on round stacks and tighten taking care not to crush the wire, conduit, condenser line or object going through the stack flashing.
- Note 5: Secure prefinished top with the two supplied screws.
- Note 6: To seal unused stacks pinch the end together and weld closed. When needed, cut the welded portion off and re-use accordingly.

DATE: JANUARY 2013	ROOF PENETRATIONS DETAILS
DRAWN BY: ENG. DEPT.	ATR HUB
SCALE: NONE	NEW CONSTRUCTION OR RE-ROOF